



LEGEND

- CONDUCTORS CONNECTED
- CONDUCTORS NOT CONNECTED
- CONDUCTOR INDICATING LOAD DIRECTION
- CURRENT TRANSFORMER

- Only qualified electrical personnel should install this equipment.
- Before performing installation or maintenance, disconnect all sources of electric power.
- Use appropriate personal protective equipment (PPE) and follow safe electrical work practices.

Find diagrams for more configurations at wattwatchers.com.au/support

Installation Notes:

- 1) Auditor is DIN-rail mounted and requires 35mm wide space.
- 2) Current transformer installation –
For grid monitoring, K is towards grid, arrow is towards load.
For solar monitoring, K is towards inverter, arrow is towards load.
- 3) Current transformers must be suitably secured in position.
- 4) All wiring shall be tidy and secured in accordance with the wiring rules in your jurisdiction.
- 5) An existing or new protective device can be used depending on the regulations in your jurisdiction.
- 6) Follow the rules in your jurisdiction for the use of RCD protection.
- 7) For more information, refer to the quick start guide and wattwatchers.com.au/support

Place current transformer connected to...	On cables connected to...
Terminals 1+ and 4+	A-Phase
Terminals 2+ and 5+	B-Phase
Terminals 3+ and 6+	C-Phase

Issue	Descr ption	Drawn	Apprd	Date
1	Final			03/19



T 2 9 WATTWAT
A T V A T T T T A W
M A T T A W T T M A T
T A T M T A W T W A T
A T A T W T T W
A T A V W T T T W T

Client Details

Drawn By
KS
Date
03/19
Approved By
JC
Date
03/19

Project title
CONNECTION DIAGRAMS

Drawing title
A6W
MONITORING 3-PHASE MAINS+SOLAR
CONNECTION DIAGRAM

Project Code 20180153	Status FINAL	Revision A
Drawing No WW018035	Scale NTS	