



LEGEND

- CONDUCTORS CONNECTED
- CONDUCTORS NOT CONNECTED
- CONDUCTOR INDICATING LOAD DIRECTION
- CURRENT TRANSFORMER

Only qualified electrical personnel should install this equipment.

- Before performing installation or maintenance, disconnect all sources of electric power.
- Use appropriate personal protective equipment (PPE) and follow safe electrical work practices.

Find diagrams for more configurations at wattwatchers.com.au/support

- Installation Notes:**
- 1) Auditor is DIN-rail mounted and requires 35mm wide space.
 - 2) Current transformer installation –
 For grid monitoring, K is towards grid, arrow is towards load.
 For load monitoring, K is towards grid/inverter, arrow is towards load.
 For solar monitoring, K is towards inverter, arrow is towards load.
 - 3) Current transformers must be suitably secured in position.
 - 4) All wiring shall be tidy and secured in accordance with the wiring rules in your jurisdiction.
 - 5) An existing or new protective device can be used depending on the regulations in your jurisdiction.
 - 6) Follow the rules in your jurisdiction for the use of RCD protection.
 - 7) For more information, refer to the quick start guide and wattwatchers.com.au/support

Issue	Description	Drawn	Approved	Date
1	Final	KS	JC	03/19
2				
3				
4				
5				



T2 9 WATTWAT
 A M A T V A T T T T A W
 I T A T M T A W T T A W
 A T A W M V W T T T W T
 WATTWAT

Client Details

Drawn By: KS
 Date: 03/19
 Approved By: JC
 Date: 03/19

Project title: CONNECTION DIAGRAMS

Drawing title: A6M MONITORING 2-PHASE MAINS + 1-PHASE SOLAR & LOAD

Project Code: 20180153
 Drawing No: WW018045
 Status: FINAL
 Revision: A
 Scale: NTS